

# Device Configuration Guide

## *BCM WLAN600 WiFi Phone*



All Rights Reserved

Copyright © 2005

The use, disclosure, modification, transfer, or transmittal of this work for any purpose, in any form, or by any means, without the written permission of the copyright holder, is strictly forbidden.

*VoiceDirector Device Configuration Guide  
BCM WLAN600 WiFi Phone*

---

### **Disclaimer**

The content of this manual is subject to change without notice and should not be construed as a commitment by the manufacturer, distributor, or service provider. This manual is furnished for informational use only and the manufacturer, distributor, or service provider assumes no responsibility for any errors or inaccuracies that may appear herein.

Any services provided through this equipment are not intended to replace or be a substitute for primary line voice services or Plain Old Telephone Service ("POTS") and are not meant to provide guaranteed Automatic Number Identification or Automatic Location Information capabilities associated with 911 or E911 services or to permit access to 411 directory assistance services. The manufacturer, distributor, or service provider will not be liable for any damages, expenses, liabilities, risks, or harms arising out of or related to the services provided through this equipment.

04.24.2006

## Table of Contents

<b>1. BCM WLAN600 WiFi Phone.....</b>	<b>1</b>
<b>STEP 1 – SETUP ACCOUNT.....</b>	<b>1</b>
<b>STEP 2 - LOGGING INTO THE WEB CONFIGURATION INTERFACE....</b>	<b>1</b>
<b>STEP 3 – CONFIGURING THE SIP PROXY SETTINGS .....</b>	<b>2</b>
<b>STEP 4 – RESTARTING THE PHONE .....</b>	<b>3</b>

## 1. BCM WLAN600 WiFi Phone

This guide contains VoiceDirector configuration instructions for the BCM WLAN600 WiFi Phone.

### STEP 1 – SETUP ACCOUNT

Make sure you have an account on the VoiceDirector server to which you are connecting.

### STEP 2 - LOGGING INTO THE WEB CONFIGURATION INTERFACE

To log into the phone's Web Configuration Interface:

1. Press the **Menu** key on the WLAN600 WiFi phone.
2. Scroll to **1. Information**, and press the **Select** key.
3. Scroll to **2. IP Address**, and press the **Select** key.  
*An IP address, such as 192.168.1.100, displays.*
4. Write down that IP address.
5. Launch Microsoft® Internet Explorer.
6. In the **Address** bar, enter **http://**, followed by the IP address you wrote down in step 4 above.

*For example*, if your IP address is 192.168.1.100 you would enter **http://192.168.1.100** in the **Address** bar.

7. Press the **Enter** key on your keyboard, or click the **Go** button.  
*A login pop-up displays.*



#### *Login Screen*

*(This is the typical Windows XP login pop-up. Windows 2000 and 98 will look different, but the fields will remain the same.)*

8. In the **User name** field, enter **voipadmin**.
9. In the **Password** field, enter **admin**.
10. Click the **OK** button.  
*You are now logged into the phone's Web Configuration Interface.*

## STEP 3 – CONFIGURING THE SIP PROXY SETTINGS

In order to use the VoiceDirector service, you must have a VoiceDirector account number and authentication password. If you do not have this information, please contact your System Administrator.

**To enter the account number and password:**

1. On the Web Configuration Interface page, click the **SIP Proxy** link at the bottom of the page.

*The SIP Proxy page displays.*

**WLAN600-S VOIP IPPhone**

**SIP Proxy**

SIP URI sip:  @  :

SIP Server Address(Outbound or Proxy)

SIP Server Port(Outbound or Proxy)

REGISTER Server Address

REGISTER Server Port

REGISTER Expire Time(sec)

OPTIONS Interval Timer

Session Expires Time(sec)

Display Name

Authentication

Registrar Username

Registrar Password

Registration Status Not Registered

[Information](#) [Network](#) [NAT TRVSL](#) [SIP Proxy](#)  
[Phone Book](#) [Wireless](#) [DSP Setting](#) [TOS/DS](#) [System](#) [Update SW](#)

*SIP Proxy Configuration Page*

2. In the **SIP URI** field, enter your VoiceDirector SIP Username in the first text box.  
*For example, if your SIP Username is 1234 and your VoiceDirector server IP address is 99.999.99.99, the field should read, **1234@99.999.99.99:5060**.*
3. In the **SIP Server Address (Outbound or Proxy)** field, enter your VoiceDirector server address. It will be the same address entered after the "@" symbol in the **SIP URI** field.

4. In the **REGISTER Server Address** field, enter your VoiceDirector server address once more.
5. Click in the **Registrar Username** field, and enter your VoiceDirector SIP Username.
6. In the **Registrar Password** field, enter your SIP password.
7. Keep the default values for all other fields.
8. Click the **Submit** button.  
*The browser page refreshes.*
9. Click the **Save** button at the bottom right-hand side of the page.  
*The values are saved, and the browser page refreshes.*



**NOTE: When you click the Submit or Save buttons, you must wait for the browser to refresh before continuing.**

## STEP 4 – RESTARTING THE PHONE

**To restart your phone and activate the settings changes:**

1. Click the **Restart** button at the bottom right-hand side of the page.
2. Once the phone restarts, close the browser window.

Congratulations! You are now ready to start enjoying VoiceDirector's superior quality on your WiFi phone.