

Device Configuration Guide

Samsung SMT-W6100 Wi-Fi Phone

Version 2.0



Voicedirector

All Rights Reserved

Copyright © 2006

The use, disclosure, modification, transfer, or transmittal of this work for any purpose, in any form, or by any means, without the written permission of the copyright holder, is strictly forbidden.

*VoiceDirector Device Configuration Guide
Samsung SMT-W6100 Wi-Fi Phone
Version 2.0*

Disclaimer

The content of this manual is subject to change without notice and should not be construed as a commitment by the manufacturer, distributor, or service provider. This manual is furnished for informational use only and the manufacturer, distributor, or service provider assumes no responsibility for any errors or inaccuracies that may appear herein.

Any services provided through this equipment are not intended to replace or be a substitute for primary line voice services or Plain Old Telephone Service ("POTS") and are not meant to provide guaranteed Automatic Number Identification or Automatic Location Information capabilities associated with 911 or E911 services or to permit access to 411 directory assistance services. The manufacturer, distributor, or service provider will not be liable for any damages, expenses, liabilities, risks, or harms arising out of or related to the services provided through this equipment.

September 2006

Table of Contents

BEFORE YOU BEGIN.....	1
STEP 1 – CONFIGURE THE DEVICE FOR VOICEDIRECTOR	1

1. Samsung SMT-W6100 Wi-Fi Phone

Before You Begin...

The Samsung SMT-W6100 WiFi Phone can be provisioned for use with VoiceLine or VoiceDirector.

If you are not a VoiceLine provider, ignore this step, and proceed to STEP 1 – Configure the Device for VoiceDirector.

If you ARE a VoiceLine provider, and the phone displays a phone number on the LCD screen, it has previously been provisioned as a VoiceLine device. The phone's MAC address must be removed from the Partner Resource Center (<https://partner.net2phone.com>) before it can be configured as a VoiceDirector device.

To remove the device from the Partner Resource Center:

1. Access the Partner Resource Center at <https://partner.net2phone.com>.
2. In the VoiceLine Support sidebar menu, click **View Account List** and locate the account for the device on the **View Account List** page.
3. Open the account by clicking on any of the links.
4. Select **Edit Device Information** from the sidebar menu.
5. Click the **Close Account** button to remove the device from PRC.
6. Wait 5 minutes, then power cycle your phone by turning it off and then on.

After the phone boots, the display will no longer show a phone number and the phone is ready to be configured for Voice Director. If the phone number still appears on the screen, power cycle the phone again.

STEP 1 – Configure the Device for VoiceDirector

To configure the phone for the VoiceDirector network:

Configure Voice Director Proxy, SIP User Name, and Password:

1. Press the **Menu** softkey.
2. Press the right arrow button and go to **6 Settings**.
3. Press the down arrow button and go to **5 Network Settings** and press the **OK** softkey.
4. Press the down arrow button and go to **4 VoIP Settings** and press the **OK** softkey.
5. Press the down arrow button and go to **4 Proxy** and press the **OK** softkey.
6. Enter your *Voice Director Server IP address* press the **OK** softkey.
For example: 192.168.0.1
7. Press the down arrow button and go to **9 SIP auth. user** and press the **OK** softkey.

8. Enter your Voice Director SIP user name and press the **OK** softkey.
9. Press the down arrow and go to **10 SIP auth. password** and press the **OK** softkey.
10. Enter your *SIP auth. Password* in the field and press the **OK** softkey.

Configure Time Settings:

11. Press the back button (circular arrow soft key) three times to return to the main Settings Menu.
12. Scroll up to **3 Time and Date Settings** and press the OK button.
13. Press the down arrow and go to **3 Set World Time** and press the ok softkey.
14. Using the right and left arrows scroll to the city that is located in your time zone and press the set softkey. If prompted, select **1 set local** if your time zone is currently NOT observing Daylight Savings Time (DST) and **2 Set DST** if it is.
15. Press the back button (circular arrow soft key) three times to get back to the Main screen.

Configure Phone Number:



16. From the main window, press the **Phonebook** softkey.
17. Press the right navigation button once.
18. Select **Own number** from the menu, and press the **OK** softkey.
19. Enter **00000000** (eight zeros) as the password, and press the **OK** softkey.
20. Enter your Voice Director SIP user name and press the **Save** softkey.

IMPORTANT:

- *This entry must be numeric; alphanumeric characters will not be accepted.*
- *This entry must match what was entered in step 8 for the Voice Director SIP user name.*

Configure Voicemail Number:

21. From the Main screen, press the Menu softkey.
22. The Messages screen will appear and **1 Voicemail** will be selected. Press the **OK** softkey.
23. The Voicemail screen will appear. Press the down arrow to select **2 Voice server number**. Press the **OK** softkey.
24. The Voice server number screen will appear. Press the **OK** softkey to select **1 Voice Mail**.
25. The Options screen will appear. Press the **OK** softkey to select **1 Edit Number**.
26. Using the keypad, enter the number you dial to check voicemail and press the **OK** softkey.

27. Power cycle the phone by holding the power () button for three seconds to turn the phone off. Then turn the phone back on by holding the power button () for three seconds

IMPORTANT: You must reboot the device for the changes to take effect.