

Samsung WIP-6000

Configuration Procedure



Configuration

Follow these steps to configure the Samsung WIP-6000 IP Phone.

Setup Account

Make sure you have an account on the VoiceDirector server you are connecting to.

Configuring the SIP Proxy Settings

In order to use the VoiceDirector service, you must have a VoiceDirector account number and authentication password. If you do not have this information, please contact your System Administrator.



NOTE

The SIP User ID should be the same as your phone's extension. For example, if the last 4 digits of your number are 4288, the SIP User ID should also be 4288.

To enter the account number and password:

1. After powering up the phone, select a network, and press the **OK** softkey.
2. The phone will prompt you to enter your phone number. Enter your VoiceDirector extension, and press the **OK** softkey.
3. Click on **Menu** > **Settings** > **Test Mode** > **VOIP Settings** (Menu 5.12.5).

4. Select **Proxy IP** and enter your Proxy IP or FQDN (Fully Qualified Domain Name) and select **OK**.
5. Select **My Tel Number** and enter your VoiceDirector SIP Extension and click **OK**.
6. Select **SIP Auth. User** and enter your VoiceDirector SIP Extension and click **OK**.
7. Select **SIP Auth. Password** and select **ASCII** mode and enter your VoiceDirector SIP Password and select **OK**.
8. Restart your Samsung WIP-6000.



NOTE

If the setting related to VoIP is changed, you have to reboot the phone.